

USER'S MANUAL


DIGITAL AUDIO PLAYER




Please read manual before operation

Technical Support Hours
Monday-Friday 8:30 AM - 8:30 PM EST, 1-800-681-2629 or 718-416-3197
Saturday-Sunday 9:00 AM - 5:30 PM EST, 1-800-727-3592
Or Send E-Mail to: techsupport@cobyusa.com


- 128MB Built-in Flash Memory
- MP3, WMA Playback
- Removable Storage Device (Music, Data and Pictures)
- Direct USB Port (No cable required)
- Plug and Play (No installation software require for Windows 2000 / Windows ME / Windows XP)

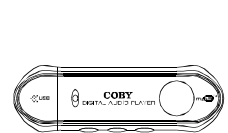


Mp3 player

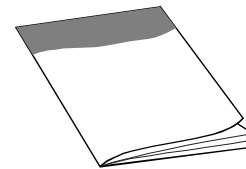

User's Manual

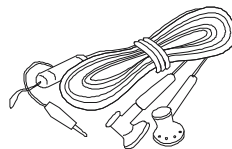

Earphones w/neck strap



USB Cable



Installation CD

1. Do not expose the unit to high temperature or humidity.
2. Do not subject the unit to severe impact, or place heavy objects on it.
3. Do not use strong detergent or solvent to clean the unit.
4. Remove battery when the device is left unused for a long period of time.
5. Do not try to disassemble and repair the device yourself.
6. Do not expose to direct sunlight or heat sources.
7. Do not store in dusty areas.

WARNING: Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm.
Wash hands after handling.


Protect your ears:

Hearing experts advise against the constant use of personal stereo played at high volume. Constant high volume use can lead to hearing loss. If you experience ringing in the ears or hearing loss, discontinue use and seek medical advice.


Battery(Not Included)

This unit operates on one alkaline battery(AAA size).

1. Open the USB cap.

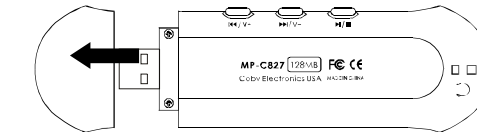


2. Open the battery cover.

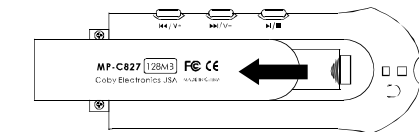

3. Insert the AAA battery.


Make sure to match the + and - ends of the battery with the diagram inside the battery compartment.

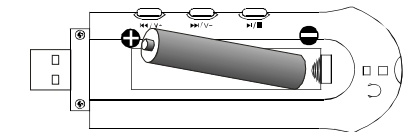

Coby Electronics Corp.
56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com

Location of Controls

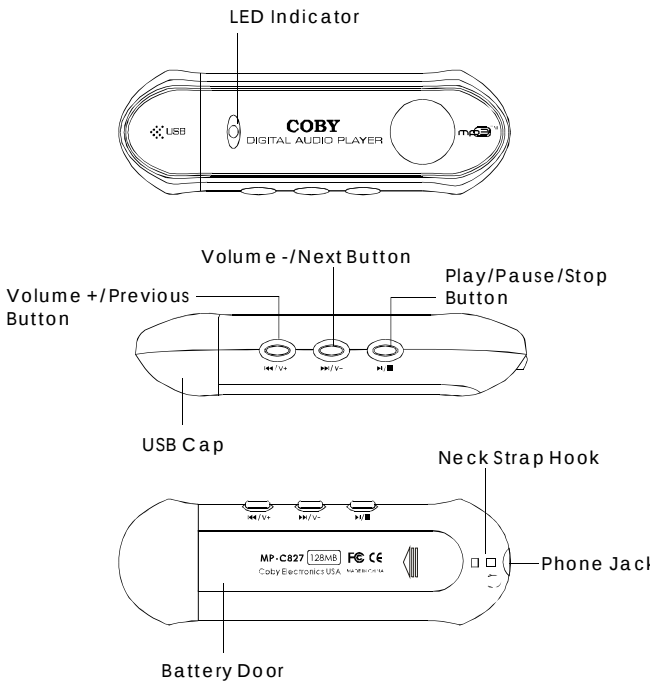

USB Driver Installation

USB Driver software Installation:
If you are using Windows Me /2K/XP or Mac X (version 10.2.6 or above), there is no installation require, just connect the player to the computer. OS will setup for one moment and then removable disk icon will show in "My computer" (For Mac OS user, it'll show on the "Desktop").

If you are using Windows98 SE, you must install the driver which will setup the update utility and driver to computer.

1. Insert the installation CD into the CD-ROM driver.
2. Click to open the disc D:(Where D:\ is your CD-ROM drive) and find out "Win98Driver.exe", click to runt he program.
3. Setup dialogue Window will be displayed on the screen.
4. Operate following the instructions on the screen until get the suggestion that restart your computer now or restart it later.
5. Select one option and then click FINISH.

- Connecting the player to PC:
1. Make sure the player is turned off.
 2. Connect to USB port on the PC computer.
 3. PC will automatically detect the player as removable disk under MY COMPUTER.
 4. Go to MY COMPUTER and confirm the connection.

Down/Dolading Files

- Downloading /Uploading files
1. Connect the player to PC.
 2. Open Window Explorer on PC.
 3. Select the file to save and drag-and drop it into the removable disc icon. You can also transfer file from the player to your PC.

Note: Do not remove the player while it's transferring files. It might currupt or damage the firmware and or files on the player. If the player is acc idently remove d while transferring and does not work properly, remove battery for 3 seconds and replace it.

- Disconnecting the Player
- After completing the file transfer, you must disconnect the player as following direction:
1. Double-click on the green arrow in the taskbar on the bottom right of the window.



2. When the [Stop a Hardware] message appears, press the [OK] button and disconnect the USB port.
3. Now you can remove the player safely.

Basic Operation

Turning Power On and Off:
Power On: Press the ►/■ button to turn on the power. The power on indicator will lights in red color.
Power Off: Press and hold the ►/■ button for at least 3 seconds to turn off the player.

Playing Music
After turning on the player, press the ►/■ button to start playing. *While the player in music playing mode, the LED indicator will flashes.*

- Pause Playback
1. Press the ►/■ button to pause playback.
 2. Press and hold the ►/■ button for 2 seconds to stop.
 3. Press the ►/■ button again to resume playback.

Adjust Tracks
Press the ►/V- button to play the next track and ◀/V+ button to play the previous track.

Adjust Volume
Press and hold the ◀/V+ or ►/V- button to adjust the volume.

Trouble Shooting

The player does not work
1. Insert a new battery.
2. Check to see if the battery is inserted properly.

Download failure
1. Check to see if the drive is installed correctly in the PC.
2. Check the connection.
3. Check if the memory is full.
4. Check the battery.

The buttons do not work
1. Remove the battery once and then insert it again.

Poor sound quality
1. Check if the quality of music file is poor, and reformat or download it again.

Specification

Power	1XAAA Battery
Memory	128MB
Size (WXHxD)	30x95x22mm
Interface	USB Rev. 1.1
Processor	65MIPS DSP
Audio Playback	Mp3 Decode
Voice Recording	IMA-ADPCM encoding
Signal to Noise Ratio	90dB
Frequency Response	20Hz-20KHz
Output	50mW(each output)
Distorting Output	0.01%-0.1%
Ports	USB
WMA Format	32-192bps
MP3-Format	Bit Rate: 96-320Kbps, Optional